

PERILICA RUBLJA UPUTE ZA UPORABU JAMSTVENI LIST

WASHING MACHINE USER MANUAL

FL-600 / FL -800 / FL-1000 / FL-1200

SADRZAJ

POGLAVLJE 1: PRIJE UPORABE

- ? Sigurnosna upozorenja
- ? Preporuke

POGLAVLJE 2: INSTALACIJA

- ? Uklanjanje transportnih vijaka
- Namještanje nozica
- Elektricne veze
- ? Prikljucak dovoda vode
- ? Prikljucak odvoda vode

POGLAVLJE 3: TEHNICKE KARAKTERISTIKE POGLAVLJE 4: UPRAVLJACKA PLOCA

- ? Tipka Start/Pauza
- Signalizacija funkcija
- ? Funkcijske tipke
- ? Regulator brzine vrtnje
- ? Programator

POGLAVLJE 5: PRANJE RUBLJA

- ? Prije samog pranja

? Pokretanje perilice (stavljanje u rad) POGLAVLJE 6: ODRZAVANJE I CIŠCENJE

- ? Filtar za vodu
- ? Filtar za pumpu
- ? Ladica za prašak
- ? Prikljucak sifona za odvod
- ? Kucište
- ? Bubanj
- ? Odstranjivanje kamenca

POGLAVLJE 7: PRAKTICNE INFORMACIJE

POGLAVLJE 8: IZBJEGAVANJE MANJIH ZASTOJA

POGLAVLJE 9: SUSTAV AUTOMATSKOG OTKRIVANJA ZASTOJA (GREŠKE)

POGLAVLJE 10: STANDARDNE OZNAKE PRANJA

POGLAVLJE 1: PRIJE UPORABE

SIGURNOSNA UPOZORENJA

- ? Ne koristite višestruke uticnice ili produzeni kabel.
- ? Ne ukopcavajte utikac sa oštecenim kablom u uticnicu.
- ? Ukoliko je strujni kabel oštecen, obavezno treba biti zamjenjen od proizvodaca ili ovlaštenog sevisera, kako bi se izbjegla opasnost od strujnog udara.
- ? Ne izvlacite utikac iz uticnice povlacenjem za kabelski dio. Izvucite utikac pridrzavajuci uticnicu rukom.
- ? Ne ukljucujte utikac napajanja vlaznim rukama.
- ? Ne dodirujte perilicu vlaznim rukama.
- ? Nikad ne otvarajte ladicu praška za pranje dok perilica radi.
- ? Ne pokušavajte otvoriti vrata dok perilica radi.
- ? Kada perilica dostigne višu temperaturu u toku rada, ne dodirujte cijev za ispust i vodu za vrijeme ispuštanja.
- ? U slucaju bilo kakvog zastoja (greške), iskljucite perilicu i zatvorite vodu. Ne pokušavajte sami popraviti kvar. Obratite se za pomoc ovlaštenom servisu.
- ? Obratite paznju da materijal za pakiranje pakiranje moze biti opasan za djecu.
- ? Ne dozvolite djeci igranje perilicom.
- ? Drzite Vaše kucne ljubimce podalje od perilice.
- ? Stroj za pranje mogu iskljucivo koristiti odrasle osobe uz pomoc informacija u ovim uputama.
- ? Stroj je predviden za kucnu uporabu. Jamstvo ne vrijedi ukoliko se koristi u komercijalne svrhe.

PREPORUKE

- ? Prašak ili omekšivac u duljem kontaktu sa zrakom ce se ovlaziti i zalijepiti za ladicu. Kako biste ovo izbjegli, stavite prašak i omekšivac u ladicu neposredno prije pranja.
- ? Preporucljivo je koristiti program predpranje za vrlo prljavo rublje.
- ? Nemojte previše napuniti stroj rubljem.

- ? Ukoliko ne koristite perilicu dulje vrijeme, iskljucite perilicu s napajanja, zatvorite slavinu od vode i ostavite otvorena vrata stroja da se unutrašnjost osuši i da nema neugodnih mirisa.
- ? Prilikom testiranja perilice, pokazalo se da mala kolicina vode ostane u stroju. Ovo nije štetno za perilicu.

POGLAVLJE 2: INSTALACIJA

Morate obratiti paznju na sljedece radnje prije korištenja perilice.

UKLANJANJE TRANSPORTNIH VIJAKA

- ? Transportni vijci koji se nalaze sa zadnje strane perilice, moraju biti uklonjeni prije samog puštanja perilice u rad.
- ? Oslobodite vijke odvrtanjem u smjeru suprotnom od kazaljke na satu pomocu odgovarajuceg odvijaca (Slika 1).
- ? Uklonite vijke izvlacenjem prema van (Slika 2).
- ? Plasticni dijelovi koji se nalaze sa unutrašnje strane perilice ce pasti na pod ispod perilice.
- ? Pazljivo podignite perilicu prema gore i pokupite plasticne dijelove.
- ? Ukoliko svi plasticni dijelovi nisu pali na pod, otvorite vrata perilice i okrenite bubanj dok plasticni dijelovi ne padnu na pod i zatim ih pokupite sa poda.
- ? U rupe sa kojih ste skinuli transportne vijke postavite plasticne cepice koje ste dobili zajedno sa perilicom (Slika 3).
- ? Sacuvajte transportne vijke koje ste uklonili sa perilice za slucaj ponovnog transporta.







SLIKA-2

SLIKA-1 SLIKA-3

NAMJEŠTANJE NOZICA

- ? Ne postavljajte perilicu na debeli prekrivac ili na slicnu mekanu podlogu
- ? Kako bi perilica radila tiho i bez ikakvih vibracija, trebalo bi je stabilizirati na ravnoj, ne klizavoj i tvrdoj podlozi.

- ? Pomocu ovih nozica mozete ugoditi balans (stabilnost) perilice.
- ? Najprije oslobodite plasticni vijak.
- ? Namještajte nozicu okrecuci je lijevo ili desno.
- ? Nakon što ste postigli stabilnost perilice, pricvrstite plasticni vijak zavijanjem prema gore.
- ? Za namještanje stabilnosti nikad ne postavljajte papir ili slicne materijale ispod perilice kako bi ste izravnali razne neravnine na podu.





ELEKTRICNE VEZE


- ? Vaš perilica radi na 220-240 V i 50 Hz.
- ? Posebni uzemljeni utikac je spojen na kabel Vaše perilice. Ovaj utikac mora biti utaknut u uzemljenu uticnicu minimalne jakosti 10 ampera. Jacina osiguraca na koji je spojena uticnica također mora biti minimalno 10 ampera. Ukoliko nemate ovakvu uticnicu i osigurac u domacinstvu, obratite se ovlaštenom elektricaru.
- ? Naša kompanija ne odgovara za bilo kakvu štetu nastalu kao posljedica korištenja stroja bez uzemljenja.


PRIKLJUCAK DOVODA VODE

- ? Ovisno o mogucnostima Vaše perilice, prikljucak dovoda moze biti samo za hladnu vodu ili hladna i topla voda. Bijela cijev je za hladnu vodu, a crvena za toplu (vrijedi za strojeve koji imaju prikljucak za hladnu/toplu vodu).
- ? Za sprjecavanje istjecanja iz prikljucka, 1 (vrijedi za hladnu vodu) ili 2 (vrijedi za hladnu/toplu vodu), brtve dolaze sa originalnim pakiranjem stroja. Umetnite ove brtve na kraju cijevi za vodu pri samoj slavini.
- ? Spojite bijelu cijev na prikljucak vode sa bijelim filtarom, a crvenu cijev na prikljucak vode sa crvenim filtarom. Ucvrstite plasticne dijelove prikljucka rukom.

- ? Pritisak vode 1 –10 bara iz slavine omogucava perilici da radi što efikasnije (pritisak od 1 bara znaci protok od 8 litara u 1 minuti iz širom otvorene slavine).
- ? Nakon što ste sve prikljucili, provjerite da li se mozda negdje pojavilo curenje tako što ce te otvoriti slavinu.
- ? Također provjerite da cijev od vode nije napukla ili oštecena.
- Pricvrstite cijev od vode na 3"/4 slavinu.

Prikljucak za hladnu vodu (Bijeli filtar ventil)

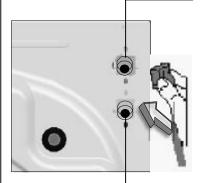


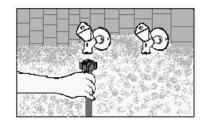

Prikljucak za toplu vodu (Crveni filtar ventil)

PRIKLJUCAK ODVODA VODE


- ? Provjerite da cijev od vode nije svinuta, izoblicena, napukla ili oštecena.
- ? Cijev odvoda vode treba biti prikljucena najmanje 60 cm, a najviše 100 cm od poda.
- ? Kraj cijevi od odvoda vode moze biti direktno spojen na otvor za odvod prljave vode ili posebnim dijelovima pricvršcen na odvodni nosac stroja.
- ? Ne pokušavajte produziti cijev odvoda vode raznim nastavcima.

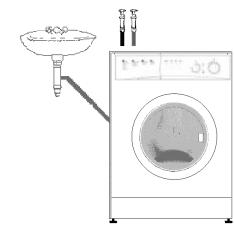

POGLAVLJE 3: TEHNICKE KARAKTERISTIKE

	FL-600 FL-800 FL-1000 FL-1200
Maksimalan kapacitet za pranje rublja (kg)	5
Preporucljiva kolicina (kg)	4,5
Visina (cm)	85
Širina (cm)	59,6
Dubina (cm)	51
Maksimalana brzina vrtnje (rpm)	600/800/ 1000/1200


(*)Maksimalana brzina vrtnje ovisi o pojedinom modelu stroja

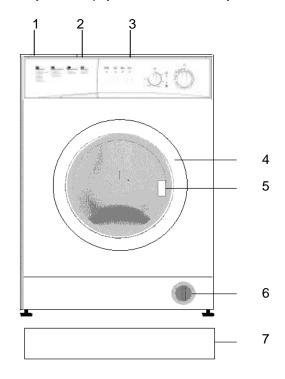


- Gornji poklopac
 Ladica za prašak
 Upravljacka ploca
 Vrata

- 5- Rucica za otvaranje6- Poklopac filtera7- Zaštitna ploca

Ove tehnicke karakteristike vrijede za perilice koji imaju prikljucak i za hladnu i za toplu vodu.

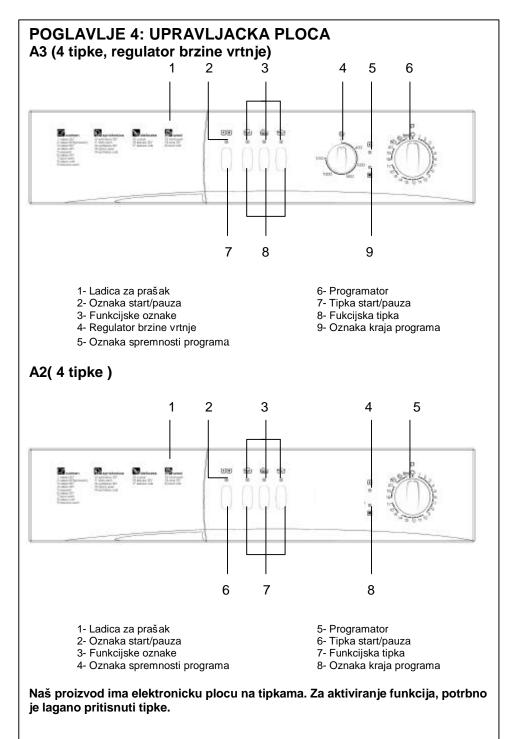

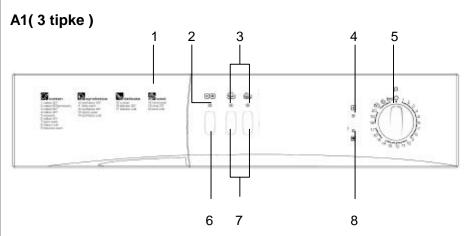

- 1- Ladica za prašak
- 2- Oznaka start/pauza
- 3- Funkcijska oznaka
- 4- Oznaka spremnosti programa
- 5- Programator
- 6- Tipka start/pauza 7- Funkcijska tipka
- 8- Oznaka kraja programa
- Naš proizvod ima elektronicku plocu na tipkama. Za aktiviranje funkcija, potrbno je lagano pritisnuti tipke.

TIPKA START/PAUZA(TASTO AVVIO/PAUSA)

Koristi se za ukljucenje izabranog programa ili za pauzu u tijeku

⚠ UPOZORENJE!
Obratite paznju da programator uvijek okrenete na 0 (iskljiuceno) prije biranja novog programa ili promjene trenutnog programa.

FUNKCIJSKA OZNAKA (SPIE DI INDICAZIONE FUNZIONE)

Kada je pritisnuta tipka start/pauza ili bilo koja druga tipka, pali se odgovarajuca oznaka (LED dioda). Ona se se gasi kada se funkcijska ili start/pauza tipka ponovno pritisne ili kada se završi izabrani funkcijski proces.

Funkcijske oznake se također koriste za otkrivanje zastoja i grešaka (poglavlje 9)

FUNKCIJSKE TIPKE

Ispiranje(Mantieni acqua di risciacquatura)



Ova funkcija se preporucuje za korištenje kada se rublje ne moze izvaditi odmah po završetku programa. Ovo ce sprijeciti guzvanje rublja. Kada se pritisne ova tipka, zadnja ispirajuca voda se ne ispušta. Kako bi se program nastavio od iste tocke, ponovno pritisnite istu tipku.

Ukoliko ne zelite da osjetljiva odjeca bude uopce iscjedena ili zelite da bude manje iscjedena, okrenite programator na 0 (iskljuceno). Zatim, okrenite programator na jedan od programa za ispuštanje ili iscjedivanje i pritisnite tipku start/pauza. Ukoliko je program koji ste izabrali program za ispuštanje vode, perilica ce ispustiti vodu. Ukoliko ste izabrali program za iscjedivanje (centrifuga), perilica ce iscjediti rublje i završiti program.



Dodatno ispiranje (Risciacquatura extra)

Pomocu ove funkcije mozete dodatno ispirati rublje.



Bez iscjedivanja (Non centrifugare)

Ovaj program se preporucuje kada je u pitanju osjetljivo rublje koje se ne smije iscjedivati. Pritiskom na ovu tipku mozete otkazati proces iscjedivanja koji je inace ukljucen u programu pranja.



Namakanje(Ammollo)

Korištenjem ove funkcije dobivate bolje cišcenje tako što ostavljate rublje u vodi sa praškom za pranje odredeno vrijeme prije nego što stroj zapocne sa stvarnim pranjem. Ova funkcija se preporucuje za vrlo prljavo rublje.



Za lakše glacanje(Stiratura facilitata)

Korištenjem ove funkcije, mozete dobiti manje izguzvano rublje nakon pranja.



Dodatna voda(Acqua supplementare)

Korištenjem ove funkcije, mozete omoguciti perilici da uzme vecu kolicinu vode nego inace. Ovo ce smanjiti otpor između dijelova rublja. Ova funkcija se preporucuje za korištenje prilikom pranja osjetljivog rublja ili za temeljito ispiranje rublja.



Regulator brzine vrtnje (Riduci velocità di centrifuga)


Korištenjem ove funkcije, mozete regulirati brzinu vrtnje sa 1200 okretaja na 800 okretaja, sa 1000 okretaja na 600 okretaja ili sa 800 okretaja na 500 okretaja, ovisno o tipu perilice.

⚠ UPOZORENJE
Funkcije pojedine perilice ovise o tipu. Ukoliko ste zaboravili koristiti odredenu funkciju, a perilica je vec u radu, pritisnite tipku te funkcije ukoliko je oznaka upaljena. Funkcija ce se aktivirati. Ukoliko funkcijska oznaka nije upaljena, funkcija se nece aktivirati.

REGULATOR BRZINE VRTNJE (Vrijedi za A3 modele)

Pomocu ovog regulatora mozete ugadati brzinu vrtnje prilikom iscjedivanja (centrifuge). Interval namještanja brzine vrtnje se krece od 0 (iskljuceno) do maksimalnog iznosa brzine vrtnje, ovisno o vrsti perilice.

Napomena: Kada se radi o vrlo osjetljivom rublju, namjestite brzinu vrtnje na odgovarajucu vijednost pogodnu za tu vrstu rublja.

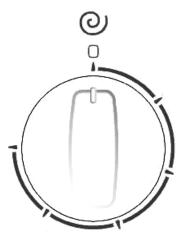


PROGRAMATOR

Pomocu programatora mozete izabrati program kojim zelite prati rublje. Mozete ugadati i birati program okretanjem programatora lijevo ili desno. Pripazite kod namještanja da se znak na programatoru tocno poklapa sa izabranim programom. Kada okrenete programator na 0 (iskljucen), dok je perilica u radu, program ce biti završen kao nepotpun.



- 2- PAMUK 60°(PREDPRANJE)
- 3- PAMUK 60°
- 4- PAMUK 40°
- 5- ŠTEDLJIVO PRANJE
- 6- PAMUK 30°
- 7- BRZO PRANJE
- 8- PAMUK HLADNO
- 9- MIX PRANJE
- 10- SINTETIKA 60°
- 11- DJECIJE
- 12- SINTETIKA 40°
- 13- SPORTSKA ODJECA
- 14- SINTETIKA HLADNO
- 15- PRANJE ZAVJESA
- 16- MEKO 30°
- 17- MEKO HLADNO
- 18- RUCNO PRANJE
- 19- VUNA 30°
- 20- VUNA HLADNO

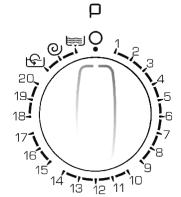





ISCJEDIVANJE



ISPUŠTANJE

POGLAVLJE 5: PRANJE RUBLJA

- ? Ukljucite perilicu
- ? Otvorite slavinu za vodu.


Prvo krug pranja

Moze se desiti da je prilikom tvornickog testiranja ostalo nešto vode u perilici. Kako bi odstranili svu zaostalu vodu, naša je preporuka da prvo pranje obavite bez rublja, s polovicom punjenja detergenta u posudi broj 2 i odabranim programom cotton (pamuk) na 90°C.

PRIJE SAMOG PRANJA

Odvajanje rublja

- ? Odvojite rublje prema vrsti (pamuk, sintetika, osjetljivo, vuna itd), teperaturi pranja i zaprljanosti.
- ? Nikad ne perite bijelo i obojeno rublje zajedno.
- ? Buduci da nova obojena odjeca moze pustiti boju, perite je odvojeno.
- ? Pripazite na metalne komadice koji se mogu naci na odjeci, uklonite ih ako je potrebno.
- ? Zakopcajte patentne zatvarace i dugmad na odjeci.
- ? Uklonite plasticne ili metalne kvacice na zavjesama, a vrpce stavite u vrecu za pranje.
- ? Perite male dijelove odjece kao što su carape, rukavice itd. u vreci za pranje.

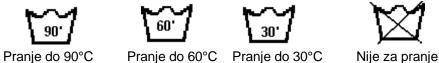

Stavljanje rublja u perilicu

- ? Otvorite vrata perilice.
- ? Napunite stroj rubljem na nacin da ga pravilno rasporedite u bubnju.
- ? Stavljajte svaki dio odjece odvojeno.
- ? Kada zatvarate vrata perilice, pazite da ne
 što od odjece nije zaglavljeno izmedu vrata i bubnja.
- ? Zatvorite vrata perilice cvrsto, inace perilica nece moci zapoceti sa pranjem.

Stavljanje praška za pranje u perilicu

Kolicina praška koju stavljate u perilicu ovisi o sljedecem:

- ? Potrošnja praška ce se mijenjati u ovisnosti o razini zaprljanosti rublja. Za manje prljavo rublje ne ukljucujte predpranje i stavite manju kolicinu praška u odjeljak ladice broj 2.
- ? Za jace prljavo rublje, izaberite program sa predpranjem, stavite ¼ mjerice praška u odjeljak broj 1, a preostali dio mjerice u odjeljak broj 2.
- ? U perilicu stavljajte samo prašak koji je namjenjen za automatsko pranje. Kolicina koja ce se koristiti za pranje rublja je otisnuta na pakiranju od praška.
- ? Što je voda "tvrda", to ce biti potrebna veca kolicina praška.
- ? Što je više rublja u perilici, to ce trebati i više praška za pranje.
- ? Stavite omekšivac u odjeljak za omekšivac ladice perilice. Ne punite ga do samog vrha. Inace ce se omekšivac izliti sa vodom za pranje kroz sifon.
- ? Gušci omekšivaci bi se trebali pomiješati sa malo vode prije ulijevanja u odjeljak ladice perilice. To je zato što gušci omekšivaci mogu zacepiti sifon i sprijeciti otjecanje omekšivaca.
- ? Mozete koristiti tekuci prašak u svim programima bez predpranja. Ukoliko koristite tekuci prašak, ucvrstite posudu za tekuci prašak u drugom odjeljku ladice perilce i napunite je prema oznakama nivoa posude.

PUŠTANJE PERILICE U RAD

Izbor programa i mogucnosti

Izaberite program i odredene funkcije za pranje rublja iz Tablice 1.

Start/Pauza

Pritiskom na ovu tipku, mozete pokrenuti program koji ste izabrali ili pauzirati određeni program.

Pokretanje programa

- ? Namjestite programator na program kojim zelite obaviti pranje.
- ? Lampica spremnosti programa ce se upaliti.
- ? Ukoliko zelite mozete izabrati jednu ili više određenih funkcija.
- ? Pokrenite program koji ste izabrali pritiskom na tipku Start/Pause.

Mjenjanje programa

Ukoliko ste izabrali program, ali ne zelite da nastavi njegovo izvršavanje:

- ? Pritisnite tipku Start/Pause.
- ? Okrenite programator na 0 (iskljuceno).
- ? Namjestite programator na program koji zelite.(Mozete ga izabrati iz Tablice 1.
- ? Oznaka spremnosti programa ce se upaliti.
- ? Pokrenite program koji ste izabrali pritiskom na tipku Start/Pause.

Odustajanje od programa

Ukoliko zelite ranije odustati od programa:

- ? Pritisnite tipku Start/Pause.
- ? Okrenite programator na 0 (iskljuceno).
- ? Okrenite programator na "Draining"("Ispuštanje") ili "Spinning"(iscjedivanje).
- ? Oznaka spremnosti programa ce se upaliti.
- ? Pokrenite program koji ste izabrali pritiskom na tipku Start/Pause.

Završetak programa

- ? Stroj ce se automatski zaustaviti kada se završi program koji ste izabrali.
- ? Oznaka završetka programa ce se upaliti.
- ? Okrenite programator na 0 (iskljuceno).

- ? Vrata ce se otkljucati u roku od dvije minute nakon završetka programa. Mozete otvoriti vrata povlaceci ih rukom prema sebi i izvaditi rublje.
- ? Nakon što ste izvadili rublje ostavite vrata otvorena da se osuši unutrašnjost perilice.
- ? Iskljucite perilicu sa napajanja elektricnom energijom.
- ? Zatvorite slavinu od vode.

⚠ UPOZORENJE!

Ukoliko nestane elektricne energije te ona ponovno dode u bilo kojoj fazi programa, perilica ce automatski nastaviti od mjesta u programu kada je nestalo elektricne energije.

Zaštita od nepotrebnog mijenjanja funkcija na upravljackoj ploci

Ova zaštita sprjecava druge osobe (djecu) da nepotrebno pritišcu tipke na upravljackoj ploci dok se stroj nalazi u radu. Zaštita se aktivira tako da pritisnemo i zadrzimo tipku start/pause duze od 2 sekunde. Za iskljucivanje zaštite morate ponovo pritisnuti i zadrzati tipku start/pause duze od 2 sekunde. Zaštita se automatski iskljucuje kada program završi.

⚠ UPOZORENJE!

Kada se aktivira zaštita, stroj ce onemoguciti korištenje programatora, regulatora brzine vrtnje (vrijedi za A3 modele) i funkcijske tipke.

POGLAVLJE 6: ODRZAVANJE I CIŠCENJE

- ? Iskljucite perilicu sa napajanja
- ? Zatvorite slavinu od vode

FILTRI ZA VODU

Na kraju cijevi za vodu koja se spaja na slavinu kao i na drugom kraju nalaze se filtri koji sprjecavaju prolazak raznih necistoca i stranih materijala iz vode u perilicu. Ukoliko perilica ne moze primiti dovoljno vode, iako je slavina za vodu otvorena do kraja, ovi filtri se moraju ocistiti ili zamijeniti.

PROGRAM	ODJELJAK ZA PRAŠAK.	FUKCIJSKE TIPKE	MAKSIMALAN KAPACITET ZA PRANJE (kg) FL-600 FL-800 FL-1000 FL-1200	VRSTA RUBLJA	OBJAŠNJENJE
1-PAMUK 90°	2	E @ @ & & @ &	5	Prljavo, pamuk i laneni tekstil	
2-PAMUK 60° (PREDPRANJE)	1+2	臣②顾臣母 ()	5	Vrlo prljavo, pamuk, obojeno i laneni tekstil	
3-PAMUK 60°	2	E © ® E G O O	5	Prljavo, pamuk, obojeno i laneni tekstil	
4-PAMUK 40°	2	& ® ® ⊕ ●	5	Lagano prljavo, pušta boju, pamuk, obojeno i laneni tekstil	
5-ŠTEDLJIVO PRANJE	2	E @ @ & @ &	5	Prljavo, pamuk, obojeno i laneni tekstil	Donje rublje, tkanina, majice,
6-PAMUK 30°	2	& ⊗ ® \$ \$ 6 €	5	Lagano prljavo, pamuk, obojeno i laneni tekstil	košulje, rucnici
7-BRZO PRANJE	2	0000	2,5	Lagano prljavo, pamuk, obojeno i laneni tekstil	
8-PAMUK HLADNO	2	也也藏形字 ()	5	Lagano prljavo pamuk, obojeno i laneni tekstil.Pere se bez tople vode.	
9-MIX PRANJE	2	也也可能也 (1)	5	Prljavo ili vrlo prljavo, mrlja, pamuk, obojeno i laneni tekstil	
10-SINTETIKA 60°	2	6000000	3	Prljavo sintetika ili sintetika mješavina tekstila	Najlonske carape, bluze
11-DJECIJE	2	£ © ∅ ⊕ 0	3	Djecije rublje	Sve djecije rublje
12-SINTETIKA 40°	2	B B B B 0	3	Lagano prljavo, sintetika ili sintetika mješavina tekstila	Najlonske carape, bluze

TABLICA-1


2	7	
`	_	•

PROGRAM	ODJELJAK ZA PRAŠAK.	FUKCIJSKE TIPKE	MAKSIMALAN KAPACITET ZA PRANJE (kg) FL-600 FL-800 FL-1000 FL-1200	VRASTA RUBLJA	OBJAŠNJENJE	
13-SPORTSKA ODJECA	2		3	Sportska odjeca	Sva sportska odjed i dzins	
14-SINTETIKA HLADNO	2	EL EN E EN E	3	Lagano prljavo, sintetika ili sintetika izmješano osjetljivo rublje. Pere se bez tople vode.	Najlonske carape, bluze	
15-PRANJE ZAVJESA	1+2		2	Zavjese kao osjetljivo rublje	Zavjese	
16-MEKO 30°	2	E	2	Lagano prljavopamuk, obojeno, sintetika ili sintetika izmješano osjetljivo rublje.	Svila mješano, košulje, bluze, poliester, poliamid, mješavina tekstila	
17-MEKO HLADNO	2	€ 6	2	Vrlo lagano prljavo, hladna voda za pranje pamuka, obojeno, sintetika ili sintetika izmješano osjetljivo rublje.		
18-RUCNO PRANJE	2	€ 💆 🔞	2	Lagano prljavo, rucno pranje pamuka, coloured, obojeno, sintetika ili sintetika izmješano rublje.	Rucno pranje svih vrsta rublja	
19-VUNA 30°	2		2	Prljavo, rucno i strojno za pranje vunenog rublja	Cue urate umane	
20-VUNA HLADNO	2	€ 3 € 6	2	Vrlo lagano prljavo, hladna voda, rucno i strojno za pranje vunenog rublja	Sve vrste vunenog rublja	
ISPIRANJE 🕤	Kada zelite	dodatno ispiranje odjece nakon pranja, mozete	koristiti ovaj program za	sve vrste odjece.		
ISCJEDIVANJE @	Kada zelite dodatno iscjedivanje odjece nakon pranja, mozete koristiti ovaj program za sve vrste odjece.					
ISPUŠTANJE 🚎	Ovaj prograr	m se koristi za ispuštanje prljave vode nakon p	oranj a lkoliko zelite ispustit	i vodu prije završetka programa	a, koristite ovaj prog	
		TABLICA-1 NA amima(osim u programimaiscjedivanjaili ispuš punite omekšivacem ∰ odieliak ladice stroi		avljatekolicinu omekšivaca, pos	tupite prema	

OPCIJE KOMPATIBILNOSTI

	Bez ispiranja	Dodatno ispiranje	Lakše peglanje	Bez iscjedivanja	Više vode	Regulacija brzine iscjedivanja	Namakanje
Bez ispiranja		DA	NE	NE	DA	NE	DA
Dodatno ispiranje			DA	DA	NE	DA	DA
Lakše peglanje				NE	DA	DA	DA
Bez iscjedivanja					DA	NE	DA
Više vode						DA	DA
Regulacija brzine iscjedivanja							DA
Namakanje							

- ? Uklonite cijev od vode
- Wklonite filtre koje ste pronašli na ventilima pomocu kliješta i temeljito isperite pomocu cetkice.
- ? Ocistite filtre od cijevi za vodu koja se spaja sa slavinom.
- ? Nakon što ste ocistili filtre, vratite ih na isti nacin kako ste ih i uklonili.

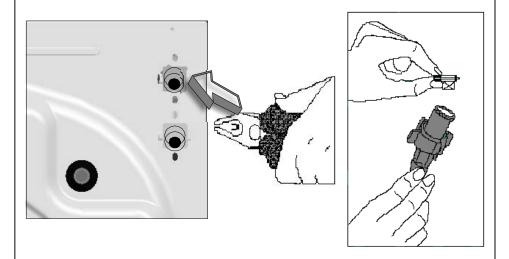

FILTAR ZA PUMPU


Ovaj filtar znatno produzava zivotni vijek trajanja pumpe, koja sluzi za odvodenje (ispumpavanje) prljave vode. Filtar sprjecava ulazak raznih necistoca u pumpu. Preporucuje se cišcenje filtra za pumpu svaka 2-3 mjeseca. Za cišcenje filtra:


- ? Uklonite zaštitnu plocu gurajuci je rukom prema gore i povlaceci je prema sebi.
- Prije otvaranja poklopca filtra, stavite neku posudu ispred poklopca filtra kako bi sprijecili curenje preostale vode u perilicu ili na pod.
- ? Oslobodite poklopac filtra okrecuci ga u smjeru suprotnom od kazaljke na satu i ispustite vodu.
- ? Uklonite strane materijale sa filtra.
- ? Provjerite rukom da li se pumpa okrece.
- ? Nakon što ste ocistili pumpu, ucvrstite poklopac filtra okrecuci ga u smjeru kazaljke na satu.
- ? Ucvrstite zaštitnu plocu na isti nacin kako ste je i uklonili.
- ? Obratite paznju da ukoliko niste pravilno ucvrstili poklopac, moze doci do ispuštanja ili curenja vode na otvoru pumpe i filtra.

⚠ UPOZORENJE!

Opasnost od opeklina!

Buduci da voda u pumpi moze biti vruca, prije skidanja filtra pricekajte da se voda ohladi.

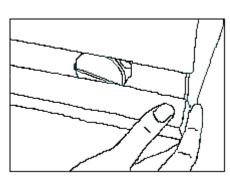


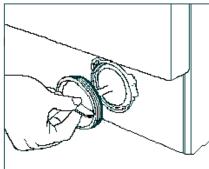


LADICA ZA PRAŠAK

Prašak za pranje moze s vremenom formirati naslage u ladici ili u pakiranju za prašak. Za cišcenje naslaga, povremeno izvucite i ocistite ladicu. Izvlacenje ladice za prašak:

- ? Izvucite ladicu za prašak do kraja (slika 1).? Podignite prednji dio ladice i nastavite izvlaciti ladicu do kraja (slika 2)
- ? Ladicu dobro operite starom cetkicom za zube u obilnoj kolicini vode.
- ? Višak praška uklonite kako bi se izbjeglo rasipanje unutar perilce.
- ? Nakon što se ladica za prašak osušila, vratite je na isti nacin natrag u perilicu.

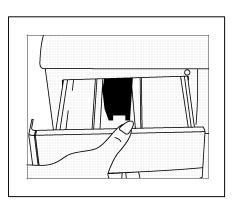

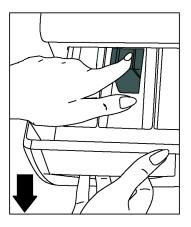

SLIKA-1

SLIKA-2

SIFON

Izvucite ladicu za prašak. Uklonite sifon i temeljito ocistite ostatake omekšivaca. Postavite ocišceni sifon na svoje mjesto. Provjerite da je pravilno postavljen.

KUCIŠTE PERILICE

Cistite vanjski dio kucišta perilice mekom krpom ovlazenoj u mlakoj vodi. Nakon ispiranja sa cistom vodom, obrišite kucište mekanom i suhom krpom.

⚠ UPOZORENJE!

Ukoliko je perilica postavljena na mjesto gdje temperatura okoline moze pasti ispod 0°C, napravite sljedece ukoliko je necete koristiti:

- ? Zatvorite slavinu od vode i skinite cijev od vode sa slavine.
- Postavite krajeve od odvoda vode i cijevi od vode u posudu na podu.
- Namjestite programator na program "Ispuštanje".
- Upaliti ce se lampica spremnosti programa.
- Pokrenite program pritiskom na tipku start/pause.
- Iskljucite perilicu kada se program završi.

Kada ste završili ove radnje, preostala voda u perilici biti ce ispuštena i nece biti opasnost od stvaranja leda u perilici. Kada ponovno stavljate perilicu u rad, pripazite da temperatura okoline bude iznad 0°C.

BUBANJ

Ne ostavljajte metalne dijelove poput spajalica ili kovanica u stroj. Ovi dijelovi stvaraju mrlje hrde u bubnju. Za sprjecavanje hrde, koristite sredstva za cišcenje bez klora i slijedite upute proizvodaca. Za cišcenje hrde, nikad ne koristite zicane cetke i slicna sredstva.

ODSTRANJIVANJE KAMENCA

Ukoliko pravilno punite perilicu praškom za pranje, nece biti potrebe za odstranjivanjem kamenca. Medutim, ukoliko ipak trebate ukloniti kamenac, koristite odstranjivac kamenca kupljen u trgovini i obratite paznju na upozorenja u upute proizvodaca.

promjenu boje na odjeci.

POGLAVLJE 7: PRAKTICNE INFORMACIJE



Alkoholna pica: Mrlje bi se trebale prvo isprati hladnom vodom, zatim izbrisati glicerinom i vodom, te zatim isprati mješavinom vode i vinskog octa.



Poliranje obuce: Mrlje se trebaju lagano ostrugati bez uništavanja odjece, izbrisati pomocu praška i isprati. U slucaju da nisu odstranjene, trebaju se izbrisati 1 postotnim alkoholom otopljenim u 2 postotnoj vodi i zatim isprati mlakom vodom.



Caj i kava: Razvucite umrljana podrucja vaše odjece i polijevajte ih što je moguce toplijom vodom ovisno o tome koliku temperaturu vode moze podnijeti.



Cokolada i kakao: Stavljanjem odjece u hladnu vodu i brisanjem sa sapunom ili praškom, perite ju na najvišoj temperaturi koju odjeca moze podnijeti. Ukoliko i dalje postoje mrlje od ulja, obrišite ih vodom obogacenom kisikom (u razmjeru od 3%).



Mrlje od rajcice: Ostavite odjecu u hladnoj vodi oko 30 minuta i perite je trljanjem pomocu praška.



Meso kruh jaja: Uklonite osušene mrlje i obrišite ih spuzvom ili mekanom krpom namocenom u hladnoj vodi. Utrljajte prašak i isperite.



Masnoce i uljne mrlje: Prvo izbrišite ostatke. Utrljajte mrlje pomocu praška i isperite u mlakoj vodi sa sapunom.



Senf: Najprije stavite glicerin na umrljanu površinu. Utrljajte prašak i isperite. Ukoliko mrlja i dalje nije nestala, obrišite ju alkoholom (Za sinteticku i obojenu odjecu, mješavina 1 posto alkohola, 2 posto vode)



Mrlje od krvi: Stavite odjecu u hladnu vodu 30 minuta. Ukoliko mrlje i dalje nisu nestale, stavite odjecu u mješavinu vode i amonijaka (3 zlice amonijaka u 4 litre vode) 30 minuta.



Krema, sladoled i mlijeko: Stavite odjecu u hladnu vodu i utrljajte zamrljane površine pomocu praška. Ukoliko mrlje i dalje nisu nestale, koristite sredstva za cišcenje pazeci na pravilan omjer.



Tinta: Stavite umrljane površine u vodu i pricekajte da tinta potpuno ne otopi u vodi. Zatim utrljajte sa vodom u koju se pomješa limun i prašak, perite nakon 5 minuta.



Voce: Razvucite umrljana podrucja vaše odjece i polijevajte ih hladnom vodom. Ne koristite vrucu vodu za ove mrlje. Operite hladnom vodom i upotrijebite glicerin. Pricekajte 1 do 2 sata i isperite sa nekoliko kapi bijelog vinskog ocata.



Mrlje od trave: Utrljajte umrljane površine pomocu praška. Utrljajte vunenu odjecu pomocu alkohola. (Za obojenu, mješavina 1 posto alkohola i 2 posto vode).



Uljana boja: Mrlje trebaju biti uklonjene prije nego se osuše. Zatim se trebaju utrljati pomocu praška i isprati.

POGLAVLJE 8: IZBJEGAVANJE MANJIH ZASTOJA

Svi popravci na perilici rublja se moraju izvršiti od strane ovlaštenog servisa. Ukoliko je došlo do određenog zastoja (kvara), a niste sposobni sami ukloniti kvar, postupite prema sljedecem:

- ? Iskljucite perilicu sa napajanja.
- ? Zatvorite slavinu od vode.
- ? Obratite se za pomoc najblizem ovlaštenom servisu.

ZASTOJ (GREŠKA)	MOGUCI UZROK	NACIN RJEŠAVANJA
	Nije prikljucena na napajanje elektricnom energijom.	Ukljucite utikac u uticnicu.
	Osigurac je neispravan.	Promijenite osigurac.
	Nema elektricne energije.	Provjerite elektricnu energiju.
Perilica ne radi.	Nije pritisnuta tipka start/pause.	Pritisnite tipku start/pause.
	Programator je u polozaju 0 (iskljucen).	Okrenite programator u zeljeni polozaj.
	Vrata nisu pravilno zatvorena.	Zatvorite pravilno vrata. Cuje se "klik".
	Slavina od vode je zatvorena.	Otvorite slavinu od vode.
	Cijev od dovoda vode je mozda svinuta	Provjerite cijev od dovoda vode.
Perilica ne prima vodu.	Cijev od dovoda vode je zacepljena.	Ocistite filtre cijevi od dovoda vode.(*)
	Filtar od ventila dovoda vode je zacepljen.	Ocistite filtre od ventila dovoda vode.(*)
	Vrata nisu pravilno zatvorena.	Zatvorite pravilno vrata. Cuje se "klik".
	Cijev od odvoda vode je zacepljena ili svinuta.	Provjerite cijev odvoda vode
Perilica ne odvodi vodu.	Filtar od pumpe je zacepljen.	Ocistite filtar od pumpe. (*)
vodu.	Odjeca nije dobro stavljena u perilicu.	Pripazite kod stavljanja odjece u perilicu.
Stroi vibriro	Nozice od perilice nisu namještene.	Namjestite nozice stroja. (**)
Stroj vibrira	Transportni vijci nisu uklonjeni.	Uklonite transportne vijke. (**)

^(*) Pogledajte dio za odrzavanje i cišcenje perilice. (**)Pogledajte dio za instalaciju perilice.

MOGUCI UZROK	NACIN RJEŠAVANJA
U periici se nalazi mala kolicina rublja.	Ne stavljajte malu kolicinu rublja u perilicu.
Prekomjerna kolicina rublja je stavljena u perilicu ili rublje nije dobro razmješteno u perilici.	Ne stavljajte preveliku kolicinu rublja u perilicu i bolje ga rasporedite u perilici.
Perilica se naslanja na neki objekt.	Ne dopustite da se perilica naslanja na tvrd objekt.
Stavljena je prevelika kolicina praška.	Pritisnite tipku start/pause. Kako bi zaustavili pjenjenje, pomiješajte jednu zlicu omekšivaca u vodi i zatim napunite ladicu. Nakon 5-10 minuta pritisnite tipku start/pause. Kod sljedeceg pranja pripazite na kolicinu praška kojeg stavljate u ladicu.
Korišten je pogrešan prašak.	Koristite samo prašak namijenjen za pranje u perilicama rublja.
Rublje je previše prljavo za program koji ste izabrali.	Izaberite odgovarajuci program.(vidi tablicu-1)
Kolicina praška kojeg ste stavili je nedovoljna za pranje.	Uzmite vecu kolicinu praška.
	U periici se nalazi mala kolicina rublja. Prekomjerna kolicina rublja je stavljena u perilicu ili rublje nije dobro razmješteno u perilici. Perilica se naslanja na neki objekt. Stavljena je prevelika kolicina praška. Korišten je pogrešan prašak. Rublje je previše prljavo za program koji ste izabrali. Kolicina praška kojeg ste stavili je nedovoljna

ZASTOJ (GREŠKA)	MOGUCI UZROK	NACIN RJEŠAVANJA
	Stavljena je prekomjerna kolicina rublja u perilicu za pranje.	Stavite onu kolicinu rublja u perilicu tako da ne premašuje maksimalan kapacitet perilice.
Rezultati pranja nisu dobri.	Mozda je voda "tvrda".	Koristite kolicinu praška prema uputama proizvodaca praška.
	Perilica nije dobro popunjena kolicinom rublja.	Pripazite prilikom stavljanja rublja u perilicu da bude širom rasporedeno u bubnju.
Voda je ispuštena iz perilice cim se perilica napunila vodom.	Kraj cijevi za odvod vode se nalazi prenisko u odnosu na perilicu.	Postavite cijev odvoda vode u pravilan polozaj (**)
Za vrijeme pranja nije se vidjela voda u bubnju.	Nema greške. Voda se nalazi na nizem dijelu bubnja.	-
lma ostataka praška na rublju.	Komadici praška koji se nisu otopili u vodi mogu ostati na odjeci u obliku bijelih mrlja.	Prilikom ugadanja perilice za program ispiranja, napravite dodatno ispiranje ili uklonite mrlje kasnije pomocu cetke.
Postoje sive mrlje na odjeci.	Ove mrlje mogu nastati od ulja ili kreme.	Prilikom sljedeceg pranja, uzmite maksimalnu kolicinu praška koju propisuje proizvodac.

(**) Pogledajte dio za instalaciju stroja.

ZASTOJ (GREŠKA)	MOGUCI UZROK	NACIN RJEŠAVANJA
Postupak iscjedivanja (centrifuge) nije uopce zapoceo ili je poceo sa zakašnjenjem.	Nema greške. To moze biti normalna stvar.	Kontrolni sistem za balansiranje ce pokušati rasporediti rublje unutar perilice. Nakon što se rublje rasporedi, prelazi se na proces iscjedivanja (centrifuge). Prilikom sljedeceg pranja pripazite da rublje bude bolje rasporedeno unutar stroja.

POGLAVLJE 9: SUSTAV AUTOMATSKOG OTKRIVANJA ZASTOJA (GREŠKE)

Vaša perilica je opremljena uredajima koji ce Vas automatski upozoriti ukoliko dode do odredene greške ili zastoja prilikom procesa pranja.

KOD ZASTOJA (GREŠKE)	POKAZATELJ ZASTOJA (GREŠKE)	MOGUCI Uzrok	NACIN RJEŠAVANJA
Err 01	Svjetlo tipke start/pause titra	Vrata nisu pravilno zatvorena.	Zatvorite vrata pravilno tako da cujete "klik". Ukoliko problem i dalje postoji, iskljucite perilicu i pozovite najblizi ovlašteni servis.

KOD ZASTOJA (GREŠKE)	POKAZATELJ ZASTOJA (GREŠKE)	MOGUCI UZROK	NACIN RJEŠAVANJA
Err 02	Lampica spremnosti programa titra.	Voda u perilici nije dovoljno zagrijana. Pritisak dovoda vode nije dovoljno visok ili ga uopce nema.	Otvorite slavinu do kraja. Mozda uopce nema vode. Ukoliko se problem i dalje ponavlja, stroj ce se automatski zaustaviti nakon nekog vremena. Iskljucite perilicu, zatvorite slavinu i pozovite najblizi ovlašteni servis.
Err 03	Lampica tipke start/pause i lampica tipke spremnosti programa titraju.	Greška je na pumpi ili je zacepljen filtar pumpe.	Ocistite filtar pumpe. Ukoliko problem i dalje postoji, pozovite najblizi ovlašteni servis.(*)

^(*) Pogledajte dio za odrzavanje i cišcenje perilice.

KOD ZASTOJA (GREŠKE)	POKAZATELJ ZASTOJA (GREŠKE)	MOGUCI Uzrok	NACIN RJEŠAVANJA
Err 05	Lampica start/pause i lampica završetka programa titraju.	Grijac u perilici ili senzor topline je pregorio.	Iskljucite perilicu i iskljucite je sa napajanja. Zatvorite slavinu od vode i pozovite najblizi ovlašteni servis.
Err 06	Lampice spremnosti i završetka programa titraju.		Iskljucite perilicu i iskljucite je sa
Err 07	Lampica start/pause i lampica spremnosti i završetka programa titraju.	Greška je na motoru.	napajanja. Pozovite najblizi ovlašteni servis.
Err 08	Lampice spremnosti i završetka programa stalno svijetle.	Mrezni napon je previsok ili prenizak.	Ukoliko je mrezni napon nizi od 150 V ili viši od 260 V, perilica ce se automatski zaustaviti. Kada se popravi mrezni napon, perilica ce nastaviti tamo gdje je stala.

POGLAVLJE 10: STANDARDNE OZNAKE PRANJA **√40°** _... Ne perite (Rucno pranje) Temperatura Toplo glacalo Srednje vruce pranja glacalo \boxtimes ____ Vruce glacalo Nije za glacanje Nije za sušenje Sušenje vješanjem 111 Sušenje na podlozi Nije za izbjeljivanje Rucno izbjeljivanje Sušenje iscjedivanjem (F)(P) Svi ovi simboli su za sušenje. Slova oznacavaju koju vrstu otopine koristiti.

THE CONTENTS

SECTION 1:BEFORE USING

- ? Safety warnings
- ? Recommendations

SECTION 2:INSTALLATION

- ? Removal of transportation screws
- ? Adjustment of feet
- ? Electrical connection
- ? Water supply connection
- ? Water drain connection

SECTION 3:TECHNICAL SPECIFICATIONS SECTION 4:CONTROL PANEL

- ? Start/Pause button
- ? Function indicator lights
- ? Function buttons
- ? Spin speed selector
- ? Program knob

SECTION 5:WASHING YOUR LAUNDRY

- ? Before washing
- ? Running the machine

SECTION 6:MAINTENANCE AND CLEANING

- ? Water inlet filters
- ? Pump filter
- ? Detergent drawer
- ? Siphon plug
- ? The cabinet
- ? The drum
- ? Remove of your machine from lime

SECTION 7: PRACTICAL INFORMATION

SECTION 8:AVOIDING MINOR FAULTS

SECTION 9:AUTOMATIC FAILURE DETECTION SYSTEM

SECTION 10:INTERNATIONAL WASHING SIGNS

SECTION 1:BEFORE USING

SAFETY WARNINGS

- ? Do not use a multiple socket or extension cord.
- ? Do not insert a plug with damaged or broken cord into the socket.
- ? If the cord is damaged it should be replaced by the manufacturer or appointed service agent in order to avoid a hazard.
- ? Never remove the plug from the socket by pulling from the cord section. Remove the plug by holding.
- ? Do not plug the power supply with wet hands.
- ? Never touch the machine with wet hands or feet.
- ? Never open the detergent drawer while the device is running.
- ? Never force to open the door of the machine while the machine is running.
- ? Since the machine can reach high temperatures while running, do not touch the drain hose and water during draining.
- ? In case of any failure, first unplug the device and close the water tap. Do not attempt to repair.Please apply to the nearest authorized service station.
- ? Do not forget that the packing material of your machine may be hazardous for children.
- ? Do not let your children play with the washing machine.
- ? Keep your pet away from your machine.
- Your machine should only be used by adults within the information written in this manual.
- ? Your machine is designed for use in house environment. Warranty will be invalid if you use it for commercial purposes.

RECOMMENDATIONS

- ? The detergent or softener in contact with air for a long time will dry and stick to your detergent drawer. To avoid this put your detergent and softener into the detergent drawer just before washing.
- ? It is recommended that you use pre-washing program for only very dirty clothes.
- ? Please do not exceed the maximum loading capacity.

- ? If you will not use your machine for a long time, unplug your machine, close the water supply and leave the door open in order to keep the inside of the machine dry and for prevention from unpleasant odour.
- ? As a result of the quality control procedures, a certain amount of water may remain in your machine. This is not harmful for your machine.

SECTION 2: INSTALLATION

You must pay attention to the following issues before using your washing machine.

REMOVAL OF TRANSPORTATION SCREWS

- ? Transportation screws, which are located at the back side of the machine, must be removed before running the machine.
- ? Loosen the screws by rotating counterclockwise by a suitable wrench. (DIAGRAM-1)
- ? Remove the screws by pulling them.(DIAGRAM-2)
- ? The plastic parts located in the interior part of your machine will fall down under the device.
- ? Lift your machine up slightly, pick up the plastic parts.
- ? If all of the plastic parts of screw groups have not fallen down; open the door of your machine, move the drum until all plastic parts fall down. Collect the parts that have fallen to the floor.
- ? To the holes where the transport screws have been removed, insert the plastic transport screw taps found in the accessories bag. (DIAGRAM-3)
- ? The transportation screws, that have been removed from the machine should be kept in hand for any other transportation necessities.





DIAGRAM-2



DIAGRAM-1

DIAGRAM-3

ADJUSTMENT OF FEET

- Po not install your machine on rugs or similar surfaces.
- ? For your machine to work silently and without any vibration, it should be settled on a flat, non-slippery and tough ground.

- ? You can adjust the balance of your machine from its feet.
- ? First, loosen the plastic adjustment nut.
- ? Adjust by rotating the feet upwards or downwards.
- ? After the balance has been reached, tighten the plastic adjustment nut again by rotating it upwards.
- ? Never put cartons, wooden blocks or similar materials under the machine to balance the irregularities on the level of the ground.





ELECTRICAL CONNECTION


- ? Your washing machine works with 220-240V and 50Hz.
- ? A special grounded plug has been attached to the network cable of your washing machine. This plug must definitely be inserted to a grounded socket with 10 ampere. The fuse flow value of the electricity line attached to this should also be 10 ampere. If you have no such sockets and fuses in your house, let it be made by a qualified electrician
- ? Our company will not be responsible for any damages that may occur as a result of usage without grounding.


WATER SUPPLY CONNECTION

- ? Depending on the features your machine, may be with single water inlet(cold) or double water inlet (cold/hot). The white headed hose is for cold water inlet and red headed hose is for hot water inlet (valid for machines with hot&cold water inlet).
- ? To prevent leakage from the connection joints, 1 (valid for cold water inlet) or 2 (valid for machines with hot&cold water inlet) seals are included in the hose packing. Fit these seals at the end of water inlet hoses on the tap side.
- ? Connect the white headed hose to the water inlet valve with white filter and connect the red headed hose to the water inlet valve with red filter (latter is valid in machines with hot&cold water inlet). Tighten the plastic parts of the connections with your hand. Please call a qualified plumber for safer connections.

- ? Water pressure of 1-10 bars from your tap will enable your machine to work more efficiently.(1 bar pressure means water flow of more than 8 liters in 1 minute from a fully opened tap).
- ? After connections are completed, check for the non-leakage of the connection joints by turning on your tap completely.
- ? Be sure that water inlet hoses are not folded, broken or crushed.
- ? Mount the water inlet hoses to a 3"/4, geared water tap.

Cold water inlet (White filter valve)

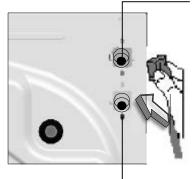


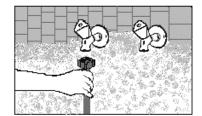

Hot water inlet (Red filter valve)

WATER DRAIN CONNECTION


- ? Be sure that water inlet hoses are not folded, twisted, crushed or elongated by stretching.
- ? Water drain hose should be mounted at a height of minimum 60 cm, maximum 100 cm from the ground.
- ? The end of the water drain hose may directly be fitted to the dirty water outlet hole or a special apparatus mounted on the outlet bracket of the wash-stand.
- ? Never attempt to extend the water drain hose by adding extra parts.

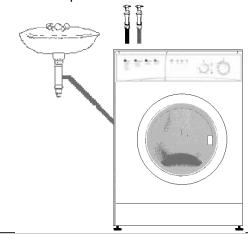


SECTION 3:TECHNICAL SPECIFICATIONS


	FL-600 FL-800 FL-1000 FL-1200
Maximum dry laundry capacity (kg)	5
Recommended loading (kg)	4,5
Height (cm)	85
Width (cm)	59,6
Depth (cm)	51
Maximum spin cycle (rpm)	600/800/ 1000/1200

(*) Maximum spin cycles depend on the model you've chosen

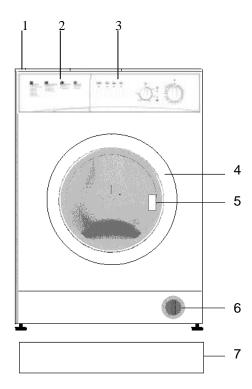

1-Upper tray
2-Detergent drawer
3-Control panel
4-Door
These technical specifications written above for single water inlet (cold) and double water inlet (cold/hot) in machines.

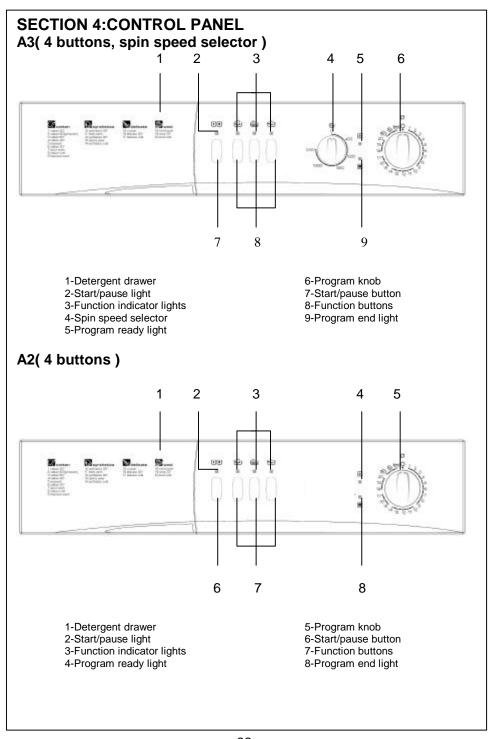

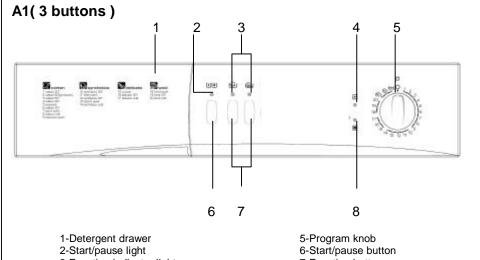

- 3-Function indicator lights
- 4-Program ready light
- 7-Function buttons 8-Program end light

START/PAUSE BUTTON

Used to start a selected program or pause during running.

⚠ WARNING!

It is required for the program knob to be brought to O(off) position before selecting the program or changing a continuing program.

FUNCTION INDICATOR LIGHTS

When the start/pause button or any function button is pressed, the corresponding light turns on. The light turns off when the function button or start/pause button is re-pressed, or when the process the selected function is completed.

The function indicator lights are also used in failure detection system mentioned in section 9.

FUNCTION BUTTONS

Rinse hold



This function is recommended to be used when the clothes cannot be taken immediately after the end of the program. This will prevent occurrence of wrinkles. When this button is pressed, the last rinsing water is not drained. For the program to continue from the same point, repress the same button.

If you do not want your sensitive clothes to be spinned or you want them to be spinned sensitively, turn the program knob to O (off) position. Bring the program knob on one of the draining or spinning programs you desire and press the start/pause button. If the program you have selected is a drain program, your machine will draining the water inside. If you have selected a spinning program, your machine will perform a spinning operation and then end the program.



Extra rinse

You can have one more rinsing done in addition to the rinses which your machine has made in all washing programs by using this function.

No spin



This program is recommended to be used for your sensitive clothes on which no spinning should be done. By pressing this function button, you can cancel the spinning process which is included in the program.

1

Soak

Using this function will ensure better cleaning by leaving your clothes in water with detergent for a certain period of time before your machine takes in the initial water and starts washing. This function is recommended to be used for very dirty clothes.



Easy ironing

By using this function, you can ensure your clothes to come out less wrinkled after the washing.



Plus water

By using this function, you can enable your machine to take in some more water than the amount in the normal washing operation. This will decrease the friction that occurs between your clothes. This function is recommended to be used for your sensitive clothes or for the ones you desire to be rinsed really well.



Spin speed reduce


By using this function, you can reduce your spinning cycle speed from 1200 cycles to 800 cycles, from 1000 cycles to 600 cycles, or from 800 cycles to 500 cycles depending on the model you've chosen.

forgot to use additional function and your machine starts to wash push the additional function button if the indicator light is on. Additional function will be activated. If the indicator light is not on, additional function will not be activated.

SPIN SPEED SELECTOR (Valid for E3 models)


By the spin speed selector knob, you can make the adjustment of speed for the process of spinning your clothes. The speed adjustment interval is between (No spin) and the maximum spinning speed of your machine.

NOTE: Do the spinning process of your sensitive and delicate clothes in the most appropriate mode.

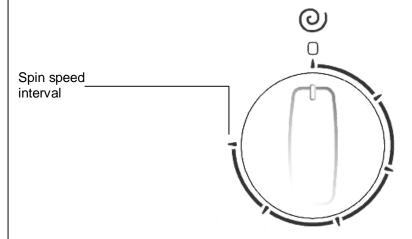

PROGRAM KNOB

With the program knob, you can select the program with which you desire to wash your clothes. You can adjust the program selection process by turning the program knob in both directions. You must be careful that the adjustment sign of the program knob is exactly on the program you want to select. When you bring the program knob to O(off) position, while your machine is running, your program will remain incomplete.

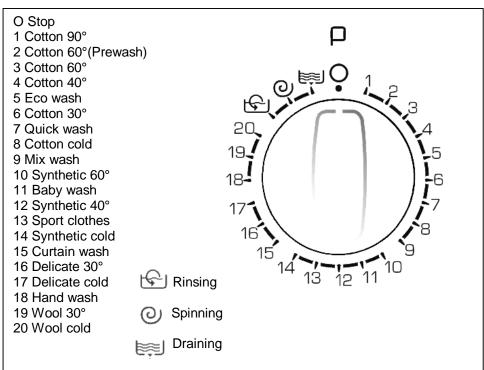

SECTION 5: WASHING YOUR LAUNDRY

- ? Plug the machine.
- ? Open the tap water.

First wash cycle

There may be water left inside your machine after factory tests and trials. It is recommended that the first wash cycle should be made without any laundry so that carry out this water; pour half a measuring cup of normal allpurpose detergent into compartment 2 and select cotton program at 90°C.

BEFORE WASHING

Discrimination of your laundry

- ? Discriminate your clothes according to their types (cotton, synthetic, sensitive, woolen, etc.), washing temperatures and level of dirtiness.
- ? Never wash your white and coloured clothes together.
- Since your new coloured clothes may shed dye on the first wash, wash them separately.
- ? Be careful that no metal pieces are found on or in the pockets of your clothes, remove if there is any.
- ? Zip and button your clothes.
- ? Remove the plastic or metal hooks of the curtains and laces or place them inside a washing bag and tie.

- ? Pull the textiles like trousers, knitted fabric, t-shirt and sweat shirt inside out.
- ? Wash your small clothes like socks and handkerchiefs in a washing









Wash up tol 90 °C Wash up to 60 °C Wash up to 30 °C

Not washable in washing machine

Placement of the clothes into the machine

- ? Open the door of your machine.
- ? Fill your clothes in your machine in a well-spread manner.
- ? Place each cloth separately.
- ? When you shut the door of your machine, be careful that no cloth is jammed between the cover and the gasket.
- ? Shut the door of your machine tightly otherwise your machine will not start the washing process.

Filling detergent in the machine

The quantity of the detergent that you will fill in your machine depends on the following criteria:

- ? Your detergent consumption will change according to the dirtiness level of your clothes. For your slightly dirty clothes, do not pre-wash and put a small amount of detergent in the compartment no.2 of the detergent drawer.
- ? For your excessively dirty clothes, select a program with prewashing, fill ¼ portion of the detergent you will put in compartment 1 in the detergent drawer and the remaining portion in compartment 2.
- ? In your machine, use the detergents developed especially for automatic washing machines. The quantities that will be used for your clothes are written on the packing of the detergents.
- ? As the hardness of your water increases, the amount of the detergent to be consumed will also increase.
- ? As the amount of your clothes increases, the amount of the detergent to be consumed will also increase.
- ? Fill your softener in the softener compartment in your detergent drawer. Do not exceed the MAX level. Otherwise, the softener will diffuse in the washing water via the siphon.
- ? The softeners with high density should be diluted with some water before filling in the drawer. That is because the softener with high density obstructs the siphon and prevents the flow of the softener.

? You can use fluid detergents in all programs without pre-washing. For this, mount the fluid detergent level plate in the second compartment of the detergent drawer and arrange the amount of fluid detergent according to the levels on this plate.

RUNNING THE MACHINE

Program selection and features

Select the program and additional functions appropriate for your clothes from Table-1.

Start/Pause

By pressing this button, you can start the program you have selected or pause a running program.

Starting the program

- ? Adjust the program knob to a program you desire.
- ? The program ready light will be on.
- ? If you want, you can select one or more additional functions.
- ? Run the program which you have selected by pressing the Start/Pause button.

Changing the program

If you have selected a program and you do not want if to continue:

- ? Press the start/pause button.
- ? Bring the program knob to O(off) status.
- ? Adjust the program knob to the program you desire.(You can select the program that you desire from Table-1).
- ? The program ready light will be on.
- ? By pressing the start/pause button, run the program which you have selected.

Cancellation of the Program

If you desire to end a running program early:

- ? Press the start/pause button.
- ? Turn the program knob to O(off) status.
- ? Turn the program knob to "Draining" or "Spinning" programs.
- ? The program ready light will be on.
- Run the program you have selected by pressing the start/pause button.

Program ending

- ? Your machine will automatically stop when the program you have selected ends.
- ? The program end light will be on.
- ? Turn the program knob to O(off) position.

- ? The door will be unlocked in approximately two minutes after the program ends. You can open the door by pulling the handle of the door towards yourself and take out your clothes.
- ? After you unload your clothes leave the door open to dry the interior of your machine.
- ? Unplug your machine.
- ? Close the water tap.

△WARNING!

If the power is off end on again after a while on any stage of the washing program, your machine will continue the program from the point where it was interrupted. This is not harmful for your machine.

Child lock

The Child Lock prevents unauthorised changes on the control panel while the machine is in operation. The child lock will be activated after the start/pause button on the control panel is pressed for a period longer than 2 seconds. To inactivate it, you have to press the same button for a period of longer than 2 seconds. At the end of the program child lock will automatically be off.

⚠ WARNING!

Your machine will inactivate the program knob, spin speed selector (valid for A3 models) and function buttons when the child lock is activated.

SECTION 6: MAINTENANCE AND CLEANING

- ? Unplug your machine.
- ? Close the water tap.

WATER INLET FILTERS

On the tap part of your machine's water inlet hose and at the ends of water inlet valves, there are filters to prevent entrance of the dirt and foreign materials in the water to the machine. If the machine is unable to receive sufficient water although your water tap is opened, these filters should be cleaned.

\sim
↽
↛

PROGRAM	DETERGENT COMPART.	ADDITIONAL FUNCTION BUTTON	MAX DRY LOAD CAPACITY (kg) FL-600 FL-800 FL-1000 FL-1200	TYPE OF LAUNDRY	EXPLANATIONS
1-COTTON 90°	2	臣②顾臣母 ()	5	Dirty, boil, cotton and linen textile	
2- COTTON 60° (PREWASH)	1+2	E - 0 - 0 - 0 - 0 - 0 - 0 - 0 - 0 - 0 -	5	Very dirty, cotton, coloured and linen textile	
3-COTTON 60°	2	E © ® B & 0 &	5	Dirty, cotton, coloured and linen textile	
4- COTTON 40°	2	E © ⊗ ® ⊕ 0 • •	5	Slightly dirty, paint to get out, cotton, coloured and linen textile	
5- ECO WASH	2	臣②顾脸\$ 0 0	5	Dirty, cotton, coloured and linen textile	Underwears, sheet, table cloth, t-shirt,
6-COTTON 30°	2		5	Slightly dirty, cotton, coloured and linen textile	shirt, towel
7- QUICK WASH	2		2,5	Slightly dirty, cotton, coloured and linen textile	
8-COTTON COLD	2	E - 3 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4	5	Slightly dirty cotton, coloured and linen textile. Washed without heating the tap water.	
9-MIX WASH	2	E 0 5 6 6 6 6 6 6	5	Dirty or very dirty, stain , cotton, coloured and linen textile	
10- SYNTHETIC 60°	2	4 6 6 6 6	3	Dirty, synthetic or synthetic mixture textile	Nylon socks, blouse
11- BABY WASH	2	E 2 8 8 0	3	Baby laundry	All baby laundry
12- SYNTHETIC 40°	2	E © ® ® ® 0	3	Slightly dirty, synthetic or synthetic mixture textile	Nylon socks, blous

TABLE-1


	•	`	
í	•	=	

PROGRAM	DETERGENT COMPART.	ADDITIONAL FUNCTION BUTTON	MAX DRY LOAD CAPACITY (kg) FL-600 FL-800 FL-1000 FL-1200	TYPE OF LAUNDRY	EXPLANATIONS
13-SPORT CLOTHES	2	臣②顾臣④ ()	3	Sport clothes	All spore clothes and jeans
14-SYNTHETIC COLD	2	E 0 8 8 6 0	3	Slightly dirty, synthetic or synthetic mixture sensitive laundry.Washed without heating the tap water.	Nylon socks, blouse
15-CURTAIN WASH	2		2	Tulle and curtain as sensitive laundry	Tulle, curtain, diolen, dralon
16-DELICATE 30°	2	6 6 6 6	2	Slightly dirty, cotton, coloured, synthetic or synthetic mixture sensitive laundry	Silk mixture, shirt, blouse, polyester,
17-DELICATE COLD	2	E1 © () () () ()	2	Very slightly dirty, cold water with to wash cotton, coloured, synthetic or synthetic mixture sensitive laundry	poliamid, mixture textile
18-HAND WASH	2	€ 0	2	Slightly dirty, wash in hand cotton, coloured, synthetic or synthetic mixture laundry	Hand wash to all laundry
19- WOOL 30°	2	© ◎ ® ● ●	2	Dirty, hand and machine to wash wool laundry	
20-WOOL COLD	2	© ® ® ©	2	Very slightly dirty, cold water, hand and machine to wash wool laundry	All wool laundry
RINSING	When you need an additional rinsing to be done to your clothes after the washing process, you can use this program for all kinds of clothes				
SPINNING	When you need an additional spinning to be done to your clothes after the washing process, you can use this program for all kinds of clothes.				
DRAINING	This program is used to drain the dirty water inside after the washing process of your machine. If you want the water inside your machine to be drained before the program ends, you can use this program.				

TABLE-1 CONTINUE

(*) You can use softeners in all programs (except spinning and draining programs) optionally. When you arrange the quantity of the softener, comply with the softener producer. Fill your softener in its (softener) compartment of the detergent drawer.

- ? Remove the water inlet hose.
- ? Remove the filters found on the water inlet valves by using a pincer and wash thoroughly with a brush.
- ? Clean the filters of the water inlet hoses located on the tap side by removing manually together with the seal.
- ? After you clean the filters, you can fit them the same way as you have removed.

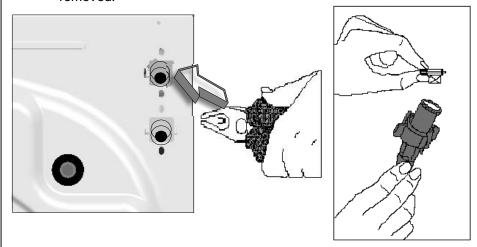

PUMP FILTER


The pump filter system elongates the life of your pump, which is used to drain the dirty water. It prevents lint to enter the pump. Cleaning of your pump filter in every 2-3 months is recommended. To clean your pump filter:


- ? Remove the kickplate by pushing with your hand upwards from the lower claws and pulling towards yourself.
- ? Before opening the filter cover, place a cup in front of the filter cover to prevent flow of the remaining water in the machine.
- ? Loosen the filter cover by rotating it counter clockwise and drain the water.
- ? Remove the foreign materials from the filter.
- ? Check for the rotation of the pump manually.
- ? After you have cleaned the pump, fit the filter cover by rotating clockwise.
- ? Fit in the kickplate by holding from the claws and push it.
- ? Do not forget that if you do not fit in the filter cover properly, it will leak water.

⚠ WARNING!

Danger of being scalded!

Since the water inside the pump maybe hot, wait for it to cool.

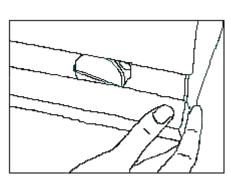


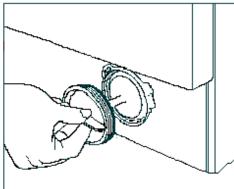

DETERGENT DRAWER

Detergents may form a sediment in your detergent drawer or in housing of the detergent drawer in time. To clean the sediment, pull out the detergent drawer from time to time. To pull out the detergentdrawer:

- ? Pull the detergent drawer to the end.(DIAGRAM-1)
- ? Lift the front of the drawer, continue to pull until the drawer is pull out.(DIAGRAM-2)
- ? Wash will an old toothbrush and excessiveamount of water.
- ? Take off the leftover detergent avoid to drop into your machine.
- ? After drying the detergentdrawer put into the housing in the same manner you pull out.

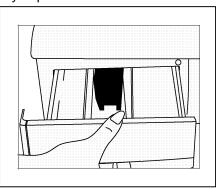

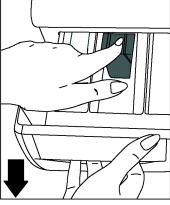


DIAGRAM-1

DIAGRAM-2

SIPHON PLUG

Pull out the detrgent drawer. Remove the siphon plug and clean the residues of the softener thoroughly. Fit the cleaned siphon plug in its location. Check if it placed properly.

THE CABINET

Clean the exterior surface of the cabinet of your machine with lukewarm water and a cleaning substance that will not irritate the cabinet. After rinsing with clean water, wipe it with a soft and dry cloth.

⚠ WARNING!

If the machine is installed in a location where the ambient temperature can fall below 0 °C, do the following when it will not be in use:

- ? Plug in the machine.
- ? Close the water tap and pull out the water inlet hose or hoses from the tap.
- ? Place the ends of the water drain and water inlet hoses in a cup on the ground.
- ? Adjust the program knob to "Draining" program.
- ? The program ready light will be on.
- ? Run the program by pressing the start/pause button.
- ? Unplug your machine when the program is over (program end light is on).

When you complete these proces, the remaining water inside the machine will be drained and thus formation of ice in the machine will be prevented. When you operate your machine again, be sure that the ambient temperature is above $0\,^{\circ}\text{C}$.

THE DRUM

Do not leave metal parts like needles, staples or coins inside your machine. These pieces cause formation of rust stains in the drum. To eliminate these stains of rust, use a cleaning substance without chlorium and follow the warnings of the cleaning substance producer. For cleaning of the rust stains, never use dish-washing wires or similar rough objects.

REMOVE OF LIME FROM YOUR MACHINÉ

If you arrange the amount of the detergent you use in your machine properly, there will be no need for lime removal. However, if you desire to apply the removal procedure, use the lime protectors in the market and pay attention to their warnings.

⚠ WARNING!

The lime eliminating substances contain acids and this may cause colour modifications in your clothes along with an adverse effect on your machine.

SECTION 7:PRACTICAL INFORMATION



Alcoholic beverages: The stain point, should first be washed with cold water, than should be wiped with glycerine and water and be rinsed with water mixed with vinegar.



Shoe Polish: The stain should be slightly scratched without ruining the cloth, rubbed with detergent and rinsed. In case it is not eliminated, it should be rubbed with 1 unit of pure alcohol (96 degrees) mixed in 2 units of water and then washed with lukewarm water.



Tea and coffee: Stretch the stained area of your cloth on the top of a container and pour water as hot as the type of your cloth can endure on it. If the type of your cloth is suitable, wash it with lye.



Chocolate and cocoa: By leaving your clothes in cold water and rubbing with soap or detergent, wash it in the highest temperature that the type of your cloth can endure. If there is still a stain of oil left, wipe with oxygenated water (in proportion of 3%).



Tomato paste: After scraping the dried pieces without ruining the cloth, leave in cold water for about 30 minutes and wash by rubbing with detergent.



Meat broth-egg: Eliminate the dried stain residues and wipe with a sponge or soft cloth wetted in cold water. Rub with detergent and wash with diluted lye.



Grease and oil stains: First wipe the residues. Rub the stain with detergent and then wash with lukewarm soapy water.



Mustard: First apply glycerine to the stained area. Rub with detergent and then wash. If the stain still does not disappear, wipe with alcohol (On synthetic and coloured cloth, a mixture of 1 unit alcohol, 2 units water should be used)



Blood stain: Lay your clothes in cold water for 30 minutes. If the stain still does not disappear, lay in mixture of water and ammonia (3 table-spoons of ammonia in 4 liters of water) for 30 minutes.



Cream, ice-cream and milk: Lay your clothes in cold water and rub the stained area with detergent. If the stain has still not disappeared, apply lye on the fabric of your clothes in proper proportion.(Do not use lye on coloured clothes.)



Mould: Mould stains should be cleaned as soon as possible. The stain should be washed with detergent, and if it does not disappear, it should be wiped with oxygenated water (in proportion of 3%).



Ink: Hold the stained area under cold water and wait until the inky water completely runs off. Then rub with water diluted with lemon juice and detergent, wash after waiting for 5 minutes.



Fruit: Stretch the stained area of your clothes on the top of a container and pour cold water on it. Do not pour hot water on the stain. Wipe with cold water and apply glycerine. Wait for 1-2 hours and rinse after wiping with a few drops of white vinegar.



Grass stain: Rub the stained part with detergent. If the type of fabric is suitable for use of lye, wash it with lye. Rub your woolen clothes with alcohol.(For coloured ones, a mixture of 1 unit pure alcohol and 2 units of water).



Oil Paint:The stain should be eliminated before it dries by applying thinner on it. Then it should be rubbed with detergent and washed.



Burnt stain: If your cloth is suitable for use of lye, you can add lye into your washing water. For woolen fabric, a cloth damped in oxygenated water should be covered on the stain and it should be ironed with a dry cloth on it. It should be washed after rinsing well.

SECTION 8: AVOIDING MINOR FAULTS

All repairing which must be done on the machine should be done by authorized service. When a repairing is required for your machine or you are unable to eliminate the failure with the help of the information given below:

- ? Unplug the machine.
- ? Close the water tap.
- ? Apply to the nearest authorized service station.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
	It is unplugged.	Insert the plug into the socket.
	Your fuse is defected.	Change your fuse.
	The electric power is off.	Check the electric power.
Your machine does not operate.	Start/pause button has not been pressed.	Press the start/pause button.
operate.	The program knob is in O(off) status.	Bring the program knob on the desired status.
	The door is not shut properly.	Shut the door properly. You should hear the click.
	Water tap is closed.	Open water tap.
	The water inlet hose may be bent.	Check the water inlet hose.
Your machine does not	The water inlet hose is obstructed.	Clean the filters of water inlet hose. (*)
receive water.	The valve inlet filter is obstructed.	Clean the valve inlet filters. (*)
	The door is not shut properly.	Shut the door properly. You should hear the click.
	The drain hose is obstructed or bent.	Check the drain hose.
Your machine is not	The pump filter is obstructed.	Clean the pump filter. (*)
draining water.	The clothes are not placed inside the machine in a well-balanced manner.	Spread the clothes inside the machine in an orderly and well-balanced manner.
Your machine is vibrating.	The feet of your machine are not adjusted.	Adjust the feet. (**)
The same	Transportation screws are not removed.	Remove transportation screws. (**)

^(*)See the section concerning the maintenance and cleaning of your machine. (**)See the section concerning installations your machine.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
	There is a small amount of clothes in the device.	It does not prevent operation of the machine.
Your machine is vibrating.	Excessive amount of clothes are filled in the machine or the clothes are not placed in a well-balanced manner.	Do not exceed the recommended quantity of clothes and spread your clothes in the machine in a well-balanced manner.
	Your machine touches a ripid object.	Prevent your machine's leaning on a tough place .
Excessive foam in the detergent drawer.	Too much detergent has been used.	Press the start/pause button.In order to stop the foam,dilute one table-spoon of softener in half liter of water and pour it in the detergent drawer.Press the start/pause button after 5-10 minutes.Arrange the amount of the detergent properly in the next washing process.
	Wrong detergent has been used.	Use only the detergents produced for full automatic machines.
The washing result is	Your laundry too dirty for the program you have selected.	Select a suitable program. (see Table-1)
bad.	The amount of detergent used is not sufficient.	Use more detergent according to the detergent.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
	Clothes exceeding the maximum capacity has been filled in your machine.	Put the clothes in your machine in a manner not to exceed its maximum capacity.
The washing result is not good.	Your water may be hard.	Use the amount of detergent according to the declaration of the detergent producer.
	Distribution of the clothes in your machine is not well-balanced.	Spread the clothes inside the machine in an orderly and well-balanced manner.
The water is drained from the machine as soon as it is filled.	The end of the water drain hose is in a position too low according to the machine.	Place the water drain hose in an appropriate height.(**)
No water is seen in the drum during washing.	No failure. The water is at the lower part of the drum.	-
There are residues of detergent on the clothes.	The pieces of some detergents which do not dissolve in water may stick to your clothes as white stains.	By calibrating your machine for "Rinsing" program, make an additional rinsing or eliminate the stains After drying with the help of a brush.
There are gray stains on the clothes.	These stains may be caused by oil,cream or ointment .	In the next washing operation, use the maximum detergent amount declared by the detergent producer.

^(**) See the section concerning instalations your machine.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
The spining process is not done or starts with delay.	No failure. The unbalanced load control may works in that way.	The unbalanced load control system will try to distribute your clothes in a homogenous manner. After your clothes are distributed, passage to spining process will be realized. In the next washing process, place your clothes into the machine in a well-balanced manner.

SECTION 9: AUTOMATIC FAILURE DETECTION SYSTEM

Your machine is equipped with systems which will both take the necessary precautions and warn you in case of any failure by controlling it self constantly during the washing processes.

FAILURE	FAILURE	PROBABLE	THE PROCESS
CODE	INDICATOR	FAILURE	TO BE DONE
Err 01	The start/pause light blinks.	The door is not shut properly.	Shut the door properly so that you hear the click. If the problem persists, turn off the machine unplug and apply to the nearest authorized service immediately.

FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 02	The program ready light blinks.	The water level in your machine is below heater. The pressure of your water supply may be low or locking.	Turn on the tap to the end. Water may be cut, check it. If the problem is still continuing, your machine will automatically stop after a while. Unplug your machine, turn off the tap and apply to the nearest authorized service.
Err 03	The start/pause light and program ready light blinks .	The pump has failed or the pump filter is obstructed.	Clean the pump filter.If the problem persists,apply to the nearest authorized service.(*)

(*) See the section regarding the maintenance and cleaning of your machine.

FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 05	The start/pause light and program end light blink.	The heater of your machine or the heat sensor has failed.	Shut down your machine and unplug. Turn off your tap and apply to the nearest authorized service.
Err 06	The program ready light and program end light blink.	The motor has failed.	Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.
Err 07	The program start/pause light, ready light and program end light stays on permanently.	Configuration error.	Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.
Err 08	The start/pause light,program ready light and program end light blink.	The motor has failed.	Shut down your machine and unplug. Turn off the tap and apply to the nearest authorized service.
Err 09	The program ready light and program end light stays on permanently.	The network voltage is too high or too low.	If the network voltage is lower than 150V or higher than 260V, your machine will automatically stop. When the network voltage is recovered, your machine will continue its operation.

